



January 18, 2007

Red Lion PAXC Auto cut-off Counter

To select your cut-off number on your counter...

1. Make sure machine is turned on (If it is not, power up and wait for counter to read a number and stop flashing items across display)
2. Press the PAR button on the counter (unit will flash SP-1 and then go to your count)
3. Press F1 or up arrow to increase your count
Press F2 or down arrow to decrease your count
4. Press PAR again, you will then see end come up on screen and the unit will go back to count mode.
5. At this point, if you want the unit to start counting from zero again, press the RST button and your current count will go to 0.

Your current count is what is always displayed on the counter at any given time. You can always press RST anytime you find it necessary to start your count over again.

If you have any questions, please feel free to call Paul C. Rodusky
@ 1-800-727-2543 or 330-698-4711 outside the USA.

Euclid® Spiral Paper Tube Corp.
339 Mill Street - PO Box 458
Apple Creek, Ohio 44606

www.euclidspiral.com

sales@euclidspiral.com