

Threading Material through Dual Sensor

You may see an error on your control panel that is indicated by a flashing red 'Print Film' indicator. This condition is easily corrected by correcting the threading of the material through the sensors.




The print film and foil sensors are located on the right hand side of your machine on the front.




Please ensure that the print film and foil are threaded between yellow marks on the sensors. Also check that the rolls of material are pushed onto the hubs as far as possible.

Note ... If you have just put a new roll of material on and start having problems with sensors, you probably don't have it pushed on far enough.

To reset the sensor fault light, simply one cycle the machine and the light will go away if properly threaded through sensor. You can one cycle as many times as needed to correct the fault. Once the fault is cleared you can resume normal operation.

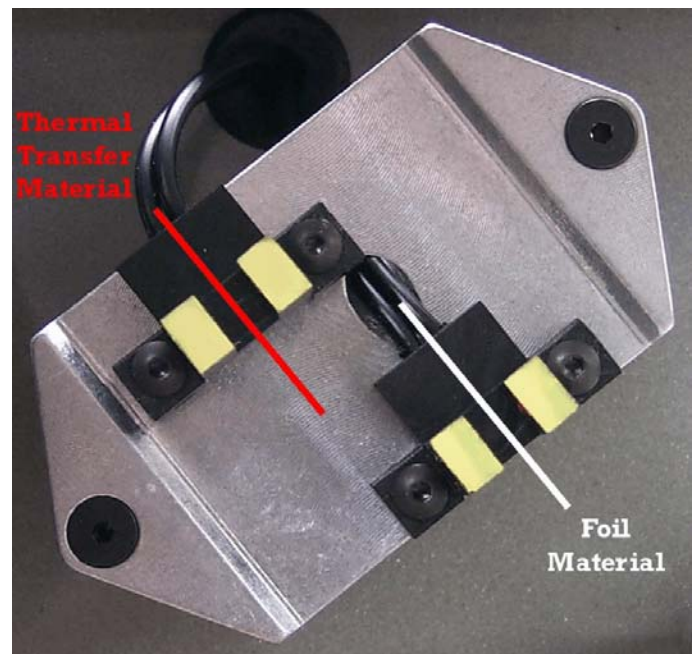

When threaded correctly, your machine will look like this picture.

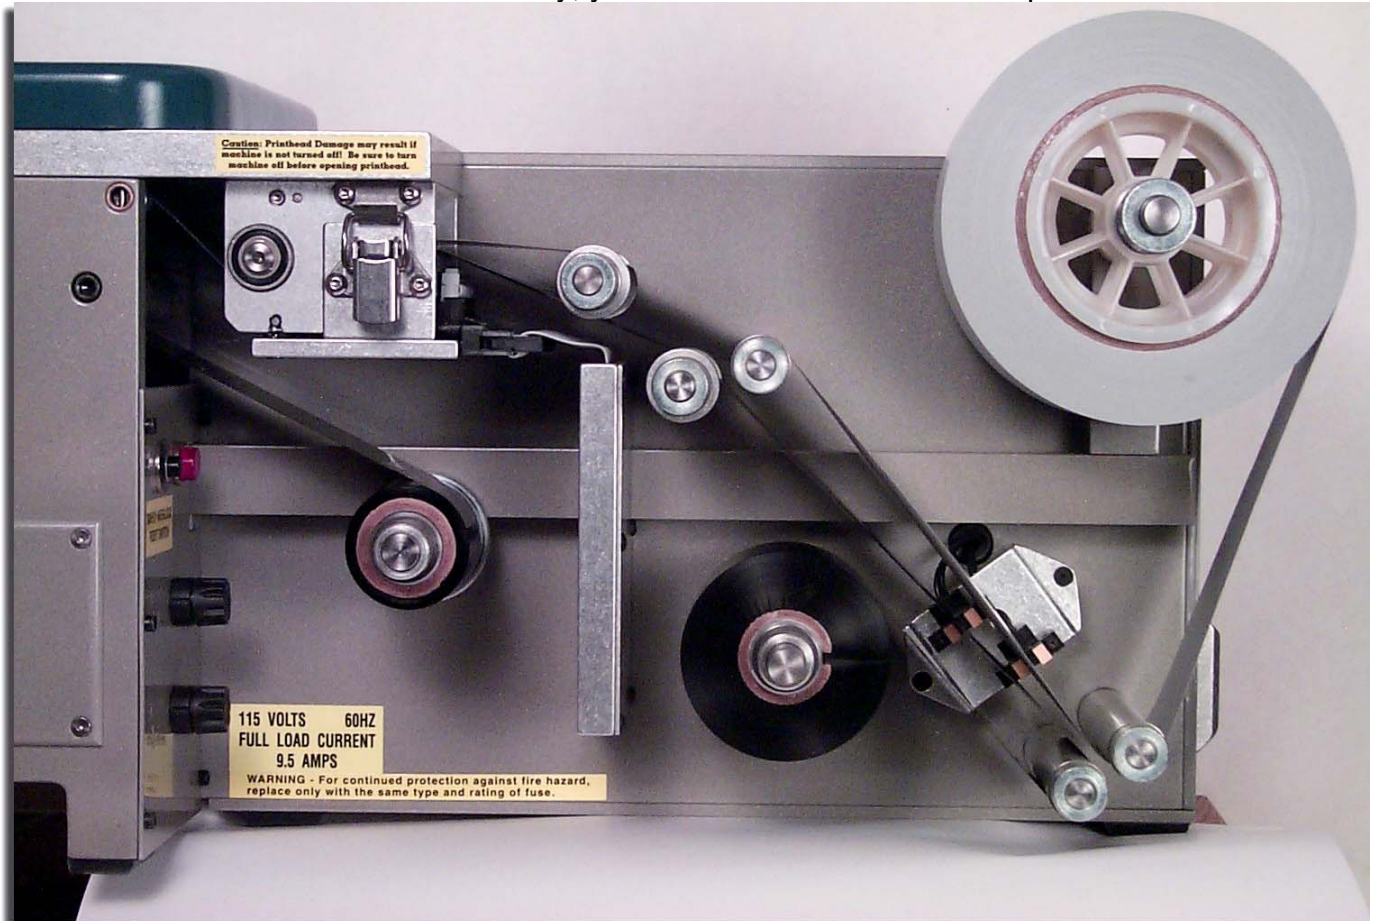

If the material is fully assembled on the spindles and you have threaded it through the sensors as depicted and you are still experiencing problems, please feel free to call

1-800-727-2543 inside the USA

OR

330-698-4711

You may also email us at mpesho@euclidspiral.com.

Thank You,

Euclid® Spiral Paper Tube Corp.
339 Mill St. - PO Box 458
Apple Creek, OH 44606

www.euclidspiral.com